

For an online step-by-step guide through the tool's initial setup, please scan the QR code on Page 4:



**IMPORTANT:** Always leave the DCA-8000 plugged-in when not in use to allow the tool to automatically check for and perform any available software updates.

### Charging Cables

1. Insert the communication cable until the connector locks into place.
2. For strain relief, pre-twist each quick connector counter clockwise, before inserting and rotating clockwise 180° onto each Locking Post on the back of the charger.
3. The connection process is complete when all three cables are secured to the charger.



### Locking Power Cord

1. Install power cord.
2. If removal is necessary, pull back on the red tab on the side of the connector to release/remove the power cord from the charger's power socket.



### Wireless Barcode Scanner Cable

1. Insert the RJ50 connector into the bottom of the scanner base until it clicks into place.
2. If necessary, using a flat blade screwdriver, pry off the plastic cover over the DB9 connection on the back of the charger.
3. Use the thumb screws on the DB9 connector to secure the cable from the dock to the charger.




**NOTE:** The barcode scanner base is magnetic and can be placed anywhere on top of the DCA charger.




### Initial Setup

1. Upon initial power-up, select your region:

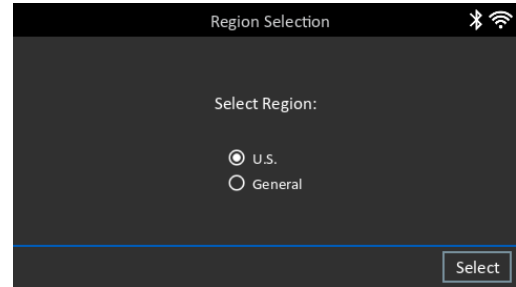


Tap **Next** to continue.

2. The Language Settings screen is displayed. If necessary, adjust the language settings for your dealership, then tap **Next** to continue.

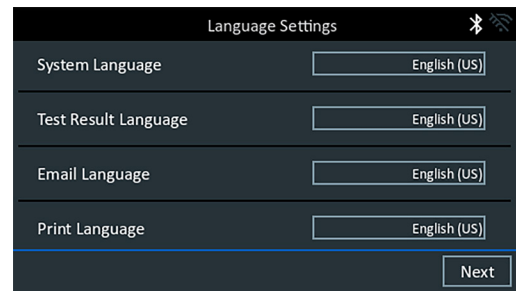

<i>System Language</i>	Select the Controller default language displayed on the screen.
<i>Test Result Language</i>	Select the Controller default language for all displayed tests and test results.
<i>Email Language</i>	Select the default standard language for the analyzer to use for all tests and results sent via email.
<i>Print Language</i>	Select the default standard language for the analyzer to use for all tests and results printed using a networked printer.


3. A Consent To Collect Data screen is displayed. Read the terms for collecting data, tap the Consent check box and then tap **Next** to continue.

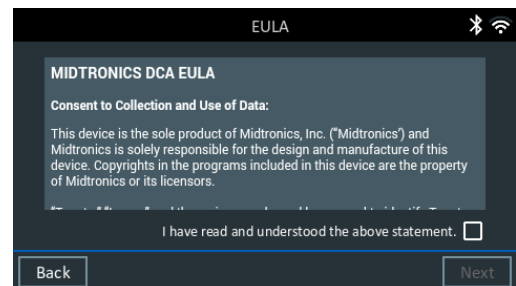

- Next you must create an admin account; begin by entering your dealership's name as the Username. Tap **Next** to continue.

**ATTENTION SERVICE MANAGERS:** The password is optional and can be left blank if all users should have access to all features including language settings and WiFi configurations.


- Select the correct logo to be used. Tap **Next** to continue after making your selection.

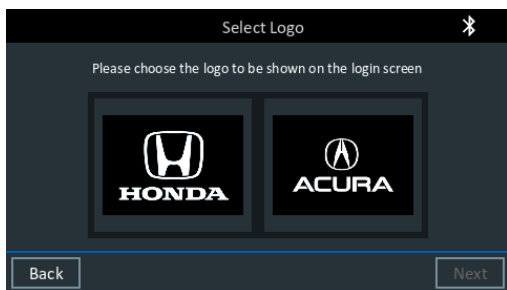

- The Date/Time Settings are displayed. Tap **Next** to continue after making any adjustment.

Select Time Format:	12-hour or 24-hour format
Select Date Format:	DD/MM/YYYY, MM/DD/YYYY, or YYYY/MM/DD
Select Time Zone:	Time zone offset from Greenwich Mean Time
Set Date:	Set the current date

- The Test Settings are displayed. Tap **Next** to continue after making any adjustments.

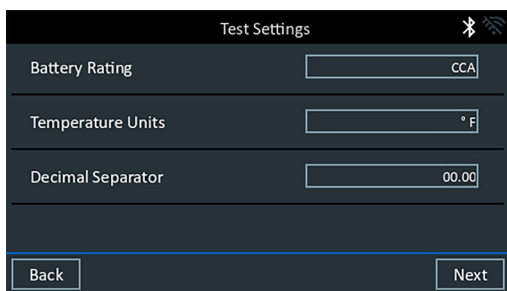

Battery Rating	CCA (Cold Cranking Amps)
Temperature Units	Select Fahrenheit or Celsius
Decimal Separator	Select decimal point or comma

- A list of detected Configured WiFi networks is displayed. Adding a network allows for the use of additional features such as emailing test results to customers, however, network setup is optional. If no network is currently available or you wish to skip this step, tap **Next** to continue. If no network has been added, skip to step 9.

**To add a network:** Select from one of the displayed detected networks. If necessary, enter the WiFi network password. Tap **Next** when finished.


To manually add a network, tap the plus (+) sign.

Use the onscreen keypad to manually enter the Network SSID, security type, and IP settings. If necessary, enter the WiFi network password. Tap **Next** when finished.


A confirmation screen is displayed when the analyzer has successfully connected to the WiFi network.

**To delete a network:** Tap a displayed network to select it. Tap trash can icon (🗑️) to delete it.


- The location selection screen is displayed. This is your Location ID. Enter your complete code and press OK. You will then see a popup asking you to confirm the location selection you have made. If you incorrectly typed the dealer code, select reconfigure to re-enter your dealer code. If this is correct information, select Verify to go to the next screen.

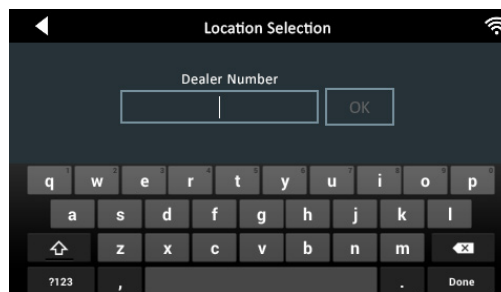

- The BMIS Login screen will be shown. It will provide a location confirmation as well as your login status. Press Next to go to the next screen.

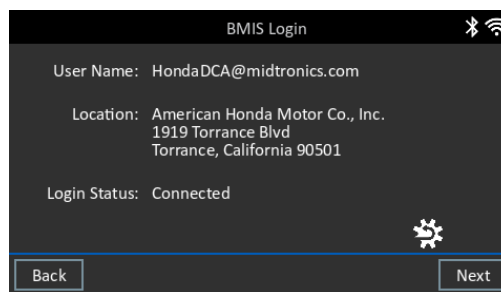


- The Email Address Book screen is displayed.

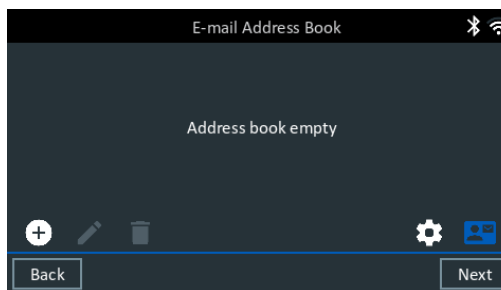


After a battery test, the user has the option of sending test results via email. Adding commonly used email addresses during setup allows for quick selection of saved recipients later. If you wish to skip this step, tap **Next** to continue.


**To add an email address:** Tap the plus (+) sign, then use the displayed keyboard to add the address.

**To edit an email address:** Tap a displayed email address to select it. Tap the pencil  icon, then use the displayed keyboard to edit the address.

**To delete an email address:** Tap a displayed email address to select it. Tap trash can icon  to delete it.


**To use the Default Email Server Settings:** Tap the gear  icon to use the default.

12. The Shop Information screen is displayed.

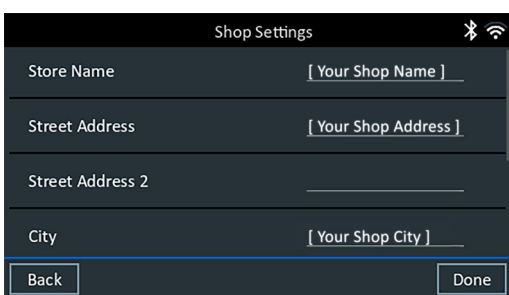

Use the onscreen keypad to enter the store name, address, and phone number. Tap **Next** to continue.

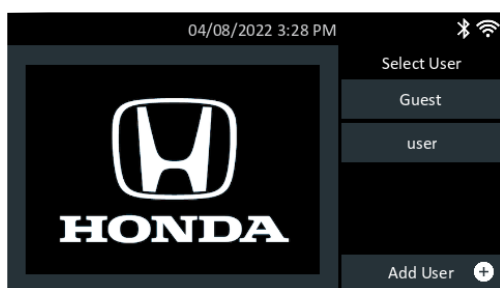


13. The login screen is displayed. Select a user name to access the Main Menu.



### Main Menu




### 1 Menu Bar

Log Out	Log out current user		Bluetooth connectivity status
	Measured battery voltage (When a battery is connected)		WiFi signal strength

### 2 Main Menu Selection Area

### In Vehicle Charge

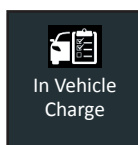

Use In Vehicle Charge to perform Battery Tests on in-vehicle batteries based on test parameters entered by the user. A System Test is also available.

At any time during the test tap  to return to the previous screen or  to return to the Main Menu.

### Performing An In Vehicle Charge

1. Connect the charger clamps to the appropriate battery posts.
2. At the Main Menu tap **Diagnostic Charge**. The Acquire VIN screen is displayed.
3. For best results, scan the barcode located on the driver's side door frame using the provided wireless barcode scanner. A single beep indicates the scan was successful.



**NOTE:** Refer to the online user manual for recommended scanning procedures and VIN scanning help by accessing the QR code located at the end of this Quick Reference Guide.

If your barcode scanner is unavailable for some reason, the VIN can also be entered manually.


<b>Battery Rating Units</b>	CCA	Cold Cranking Amps: Battery current at 0 °F (-17.8 °C).	100 to 3000
	JIS	Japanese Industrial Standard: Usually printed on battery label.	26A17 to 245H52
<b>Battery Type</b>	Flooded, AGM (Absorbed Glass Mat), AGM Spiral, Gel, EFB		
<b>Battery Rating</b>	Enter the Battery Rating Units value.		

4. Following the testing process, if the battery parameters were not filled in from the VIN scan, you will need to manually enter the Battery Type, Units, and Rating.
5. At the Edit Battery Info screen, tap on the corresponding box to edit the parameter information.



**NOTE:** Battery Type, Units, and Rating must be filled in before proceeding.

## Battery Test Results

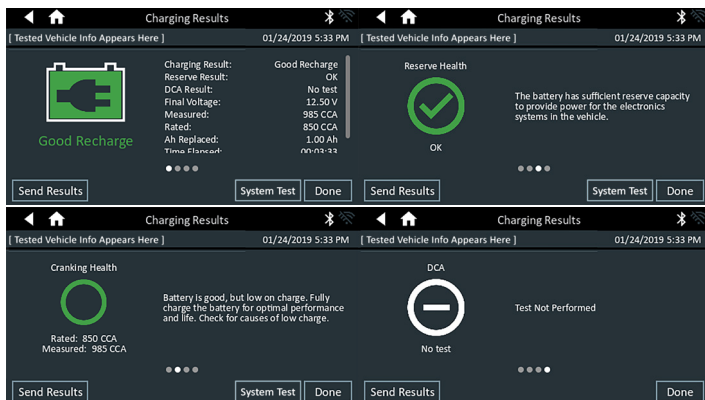

Icons are color-coded to indicate status.


<b>Green:</b>	All test parameters were completed and have passed.	<b>Red:</b>	The battery has failed the test.
<b>Yellow:</b>	Some test parameters may require further testing.	<b>White:</b>	Insufficient data to perform the test.

Tap **Done** or **System Test** to continue with the System Test.



**NOTE:** Refer to Test Result Decision Tables in the on-line user manual for a complete explanation of possible test results.

## System Test Results-Summary

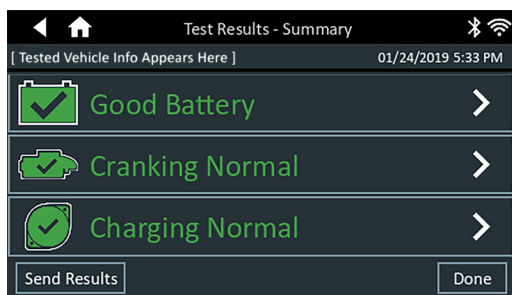

## Test Results - Summary

A Test Results-Summary screen is displayed following a System Test. Tap > to view detailed test results for each part of the test.



**NOTE:** Refer to Test Result Decision Tables in the on-line user manual for a complete explanation of possible test results.

To send the test results to a configured printer or via email tap **Send Results** and select an option. To return to the Home Screen, tap **Done** or to return to the Main Menu.

## Additional Resources

Scan this QRC with your smart phone to access the full user manual and other online resources on the Acura/Honda DCA-8000P Knowledge Base.



Acura/Honda DCA-8000P Knowledge Base



www.midtronics.com

**Corporate Headquarters**  
 Willowbrook, IL USA  
 Phone: 1.630.323.2800  
 Canadian Inquiries  
 Toll Free: +1 866 592 8052

**Midtronics b.v.**  
 European Headquarters  
 Houten, The Netherlands  
 Serving Europe, Africa, the Middle East, and The Netherlands  
 Phone: +31 306 868 150

**Midtronics China**  
 China Operations  
 Shenzhen, China  
 Phone: +86 755 2374 1010

**Midtronics India**  
 Navi Mumbai, India  
 Phone: +91 22 2756 4103/1513  
**Asia/Pacific (excluding China)**  
 Contact Corporate Headquarters  
 Phone: +1.630.323.2800